
Operating Instructions

30L 40L 50L 60L Collapsible sensor bin

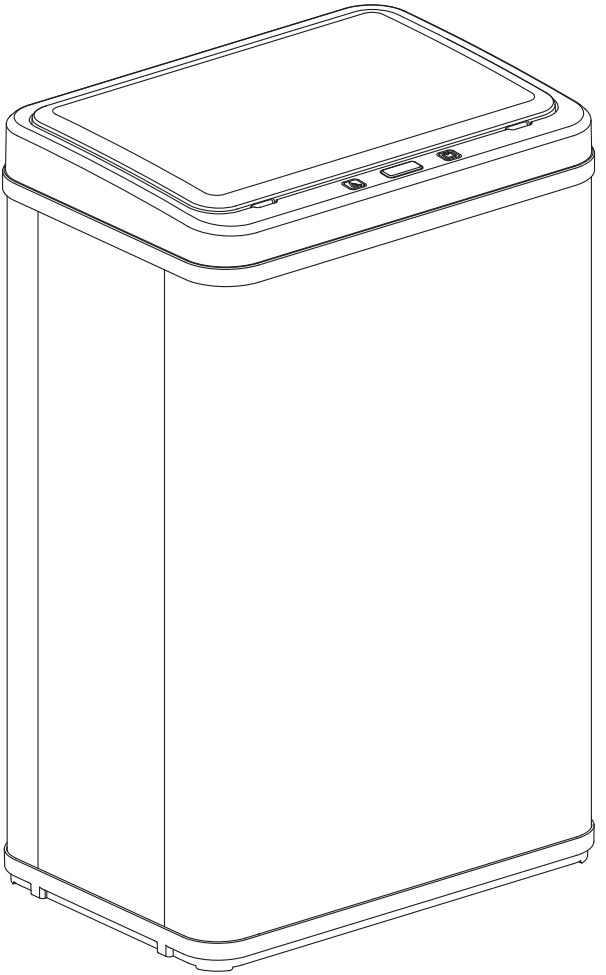


Product Information

Dimensions	35.5x26x43.5cm
Volume	30L
Power	4 *AA Batteries(Not included)

Dimensions	35.5x26x55cm
Volume	40L
Power	4 *AA Batteries(Not included)

Dimensions	35.5x26x67cm
Volume	50L
Power	4 *AA Batteries(Not included)

Dimensions	35.5x26x79cm
Volume	60L
Power	4 *AA Batteries(Not included)

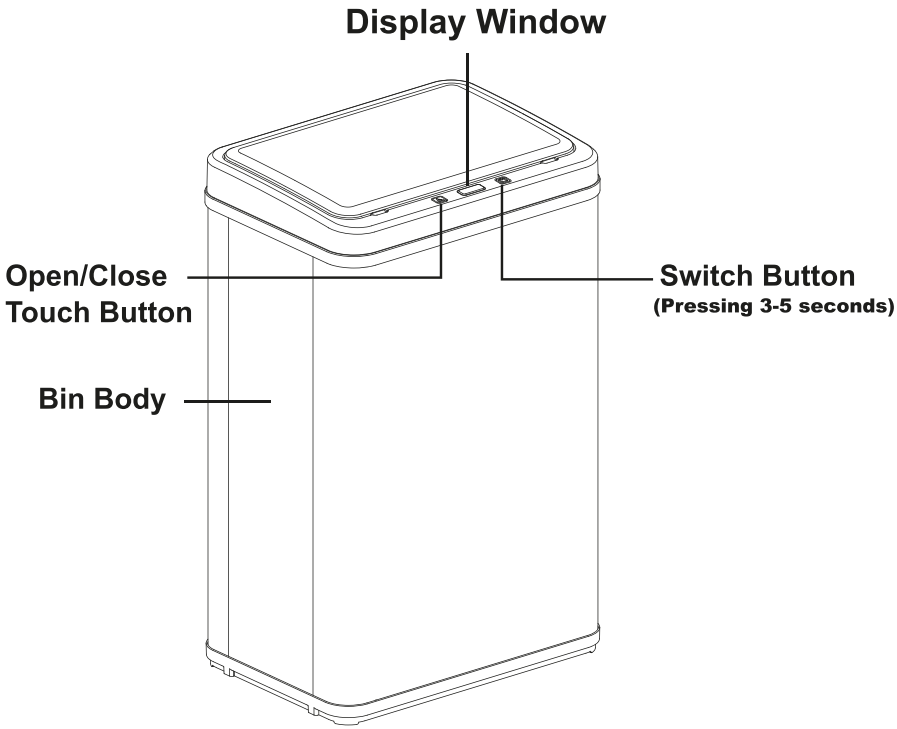

Operation Instruction

(1) Open the battery cover at the bottom of the lid and insert 4pcs #AA size batteries according to the correct polarity then close the battery cover.

(2) Turn on the power switch on the lid - Pressing 3-5seconds , then the indicator will turn green for 3 seconds (Approx). When the indicator twinkles green 3 times. it means the electronic circuit is waiting in a normal status.

(3) When you need to toss the garbage into the bin, simply hover your hand above the lid within 15-25cm and it will open. The lid will then close after 5 seconds of inactivity. The cover will keep open if your hand or object stays in the induction area.

(4) When the dustbin is full, press the "  " button at the induction window to keep the lid open . This is in order to deal with the frequent switch of the dustbin. Press the "  " button to close the lid and then the circuit resumes its automatic function.

(5) When the cover is open, the indicator is green.
When the cover is closing, the indicator is red.
When you use the Manual open-cover function, the indicator will turn green.

Safety Cautions

This means forbidden

This means you must do it

Caution

Not to be flushed with water because of the electric and electronic components. Can be wiped with wet wipes on surface .


Avoid direct casting of sunshine on the induction receiver window.


During the opening process of the cover, Don't press the cover with force.

Dismantling,repair and alternation of the product are absolutely


When batteries are going running out, please replace with new ones instantly.

Don't put anything on the dust-bin cover.

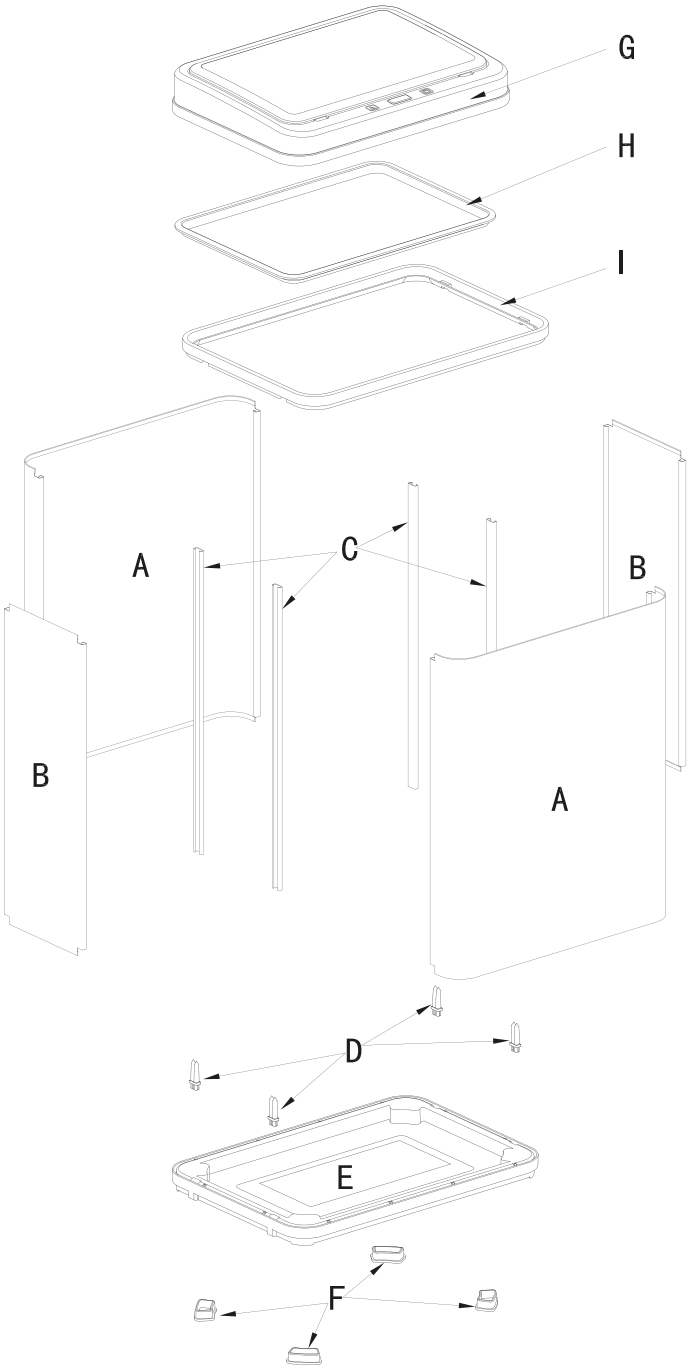

G
H
I
A
C
B
B
A
D
E
F

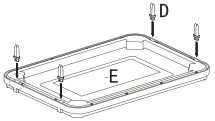


①

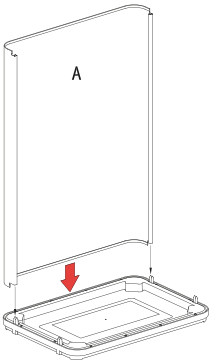


②

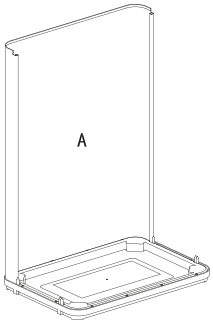


③

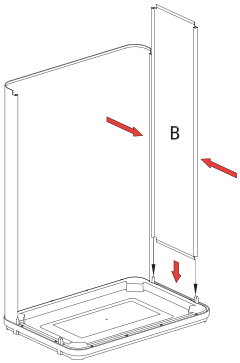


④

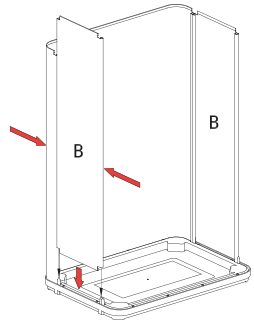


⑤

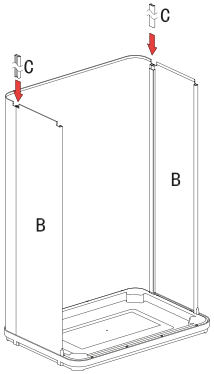


⑥

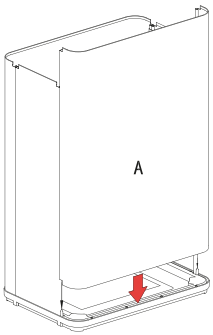


⑦

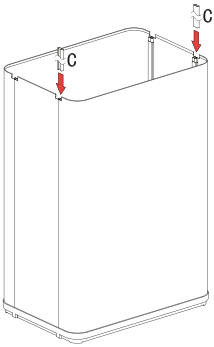


⑧

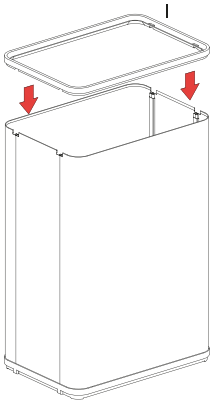


⑨

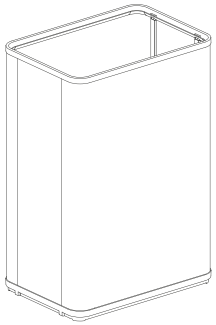


⑩

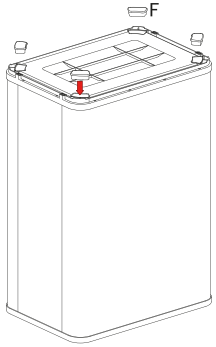

⑪

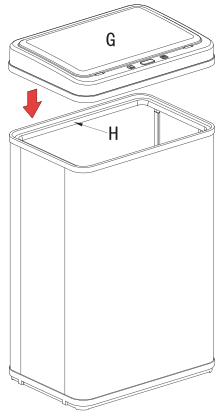

⑫

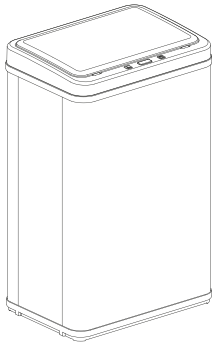

⑬